



# DigitalFlow™ GF868

## Panametrics flare gas mass ultrasonic flowmeter with extended performance range

The DigitalFlow GF868 ultrasonic flowmeter uses the patented Correlation Transit-Time™ technique, digital signal processing, and an accurate method of calculating molecular weight. Add to these features the inherent advantages of ultrasonic flow measurement reliability with no routine maintenance, high accuracy, fast response, and wide rangeability, the DigitalFlow GF868 flowmeter is the clear choice for flare gas applications.


## Applications

The DigitalFlow GF868 flowmeter is a complete ultrasonic flow metering system for:

- Flare gas
- Track down or prevent losses from leakage with positive material identification
- Account for total plant throughput of material
- Reduce cost of steam and fuel usage with proportional control
- Conserve energy by eliminating unnecessary flaring
- Comply with government regulations for pollution control
- Vent gas
- Hydrocarbon gases
- Biogases
- Digester gases

## Correlation transit-time technology is ideal for flare gas flow measurement

The correlation transit-time technique has distinct advantages over other methods of flare gas flow measurement, and it is used to solve a variety of difficult problems. Typically, gas in flare stacks, headers or laterals is a mixture of components from different sources. Flow rate in flare systems may be unsteady or even bidirectional. Pulsating pressure, varying composition and temperature, harsh environment, and wide flow range further complicate the measurement. The GF868 is designed for superior performance under these conditions.

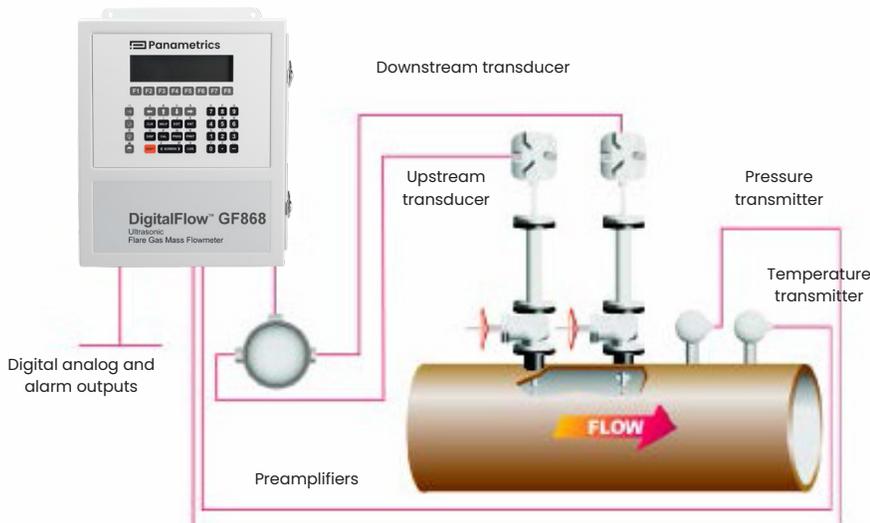

Typical meter set-up for standard volumetric or hydrocarbon mass flow

## Features

- Measures velocity, volumetric and mass flow
- Standard velocity range to 100 m/s (328 ft/s) standard
- Extended velocity range to 120 m/s (394 ft/s)\*
- Measures instantaneous average molecular weight
- Measures Net Heating Value (NHV) of vent gas in BTU/SCF, MJ/m<sup>3</sup>, or KJ/m<sup>3</sup>
- Measures hydrocarbon gases
- Self-calibration check assures accurate worry-free operation
- Delivers accurate flow rate, independent of gas composition
- Measures very low to very high velocity, 4000 to 1 turndown ratio
- Field-proven installation techniques
- Built-in totalizers
- Built-in power supply for pressure and temperature transmitters
- 4000 to 1 turndown ratio
- One or two channel/path configurations

\* Velocity maximum may be higher in specific installations – consult with Panametrics

## Patented molecular weight measurement method

The DigitalFlow GF868 uses a patented method for calculating the average molecular weight of hydrocarbon mixtures. This proprietary algorithm extends the range for measuring average molecular weight, while improving accuracy and compensating for non-hydrocarbon gases better than ever before possible. Higher accuracy mass flow data and more precise knowledge of flare gas composition can improve the efficiency of plant operation, enabling correct metering of steam injection at the flare tip, rapid troubleshooting of leaks into the flare stream, early detection of process control problems, and accurate plant balance.


## Best technology for flare gas measurement

Ultrasonic flow measurement, the ideal technology for flare gas applications, is independent of gas properties, and does not interfere with the flow in any way. All-metal ultrasonic transducers installed in the pipe send sound pulses upstream and downstream through the gas.

From the difference in these transit times between the transducers, with and against the flow, the DigitalFlow GF868's on-board computer uses advanced signal processing and correlation detection to calculate velocity, and volumetric and mass flow rate. Temperature and pressure inputs enable the meter to calculate standard volumetric flow. For maximum accuracy, use the two channel version and measure along two different paths at the same location. The two-channel meter can also measure the flow in two separate pipes or at two different places on the same pipe.

## Simple installation

The flowmeter system consists of a pair of transducers for each channel, preamplifiers, and an electronics console. The transducers can be installed as part of a flowcell, or directly into the pipe with a hot or cold-tapping procedure. The electronics console of the DigitalFlow GF868 meter can be located up to 1,000 ft (300 m) from the transducers.

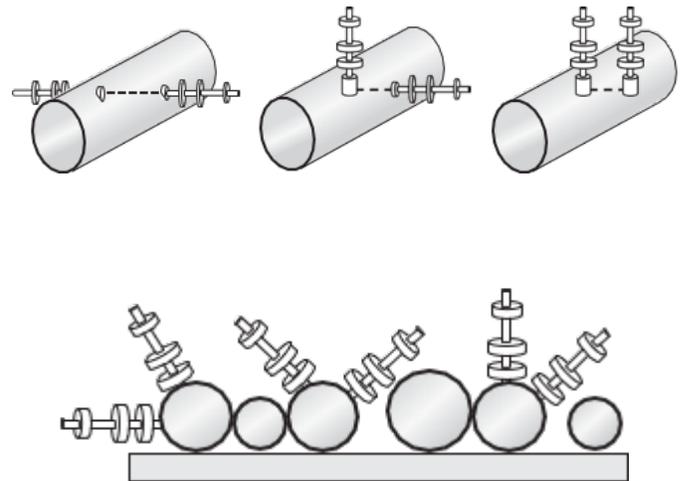

Standard transducer mounting configurations

## One meter, wide range of flow conditions


### High flow

The DigitalFlow GF868 meter achieves a new standard rangeability of 3280 to 1 and a new Extended Range rangeability of 4000 to 1. It measures velocities from 0.1 to 328 ft/s (0.03 to 100 m/s) standard in both directions, while the Extended Range version measures velocities to 394 ft/s (120 m/s) in one direction, in steady or rapidly changing flow, in pipes from 2 in to 120 in (50 mm to 3 m) in diameter. With this range of operation, one DigitalFlow GF868 flowmeter performs measurements under most of the conditions that may occur in a flare line on or offshore. The extended velocity range to 100 m/s is enabled in standard meters with no loss of accuracy.



### Low flow

For base load operation the volumetric flow in flares is often in the range 0.1 to 1 f/s (0.03 to 0.3 m/s) and the flare gas flowmeter improves the accuracy over that range, but still measures at high velocity during facility relief or upset conditions. Additional paths, longer paths, unconventional configurations and location of paths are used to achieve accurate low flow measurements. A single path or two path meter can be selected and optimized to meet both high flow and low flow measurement requirements.

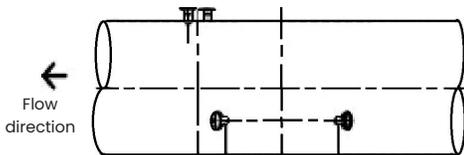

### Energy measurement

Latency in measuring the energy content of a flare gas can lead to poor combustion efficiency or fuel gas waste at the flare tip. This can lead to excessive emissions, mostly harmful methane, into the atmosphere, risking increased fine associated with non-compliance and greater negative impact on the climate. The model GF868 has an option for measuring the net heating value (NHV) of the flare gas to help operators optimize their assist flares to provide a smokeless flame and maintain a high combustion efficiency without the latency issues or the installation and maintenance costs of a separate analyzer. For increased capabilities unlocking the full potential of reduced emissions and flare control and optimization, use a GF868 or an XGF868 with flare.iQ advanced control solution.

## Identify leak sources, reduce steam usage and improve plant material balance

Leaks and excess steam delivery are two major causes of loss of product and energy. Reducing them immediately improves the overall efficiency in refinery and chemical plant operation. Payback for the entire DigitalFlow GF868 installation usually occurs within a matter of months. The DigitalFlow GF868 can help save millions of dollars in reduced losses.

Once the sound speed of the gas has been determined by the DigitalFlow GF868, its on-board computer uses temperature and pressure inputs in conjunction with the sound speed to calculate instantaneous average molecular weight and mass flow rate of the gas. These parameters are used to help identify sources of leaks into the flare system. Detection of even a small increase in flow rate into the flare system may indicate a leak source such as partially unseated relief valve. An accompanying change in the average molecular weight of the flare gas may be used to help locate the leak source. Quick identification and elimination of leak sources into the flare system saves significant amounts of potentially lost energy and product. Mass flow rate may be used to perform a mass balance calculation and to control flare tip steam injection. By knowing the exact amount of gas flow and average molecular weight in the flare stack, delivery of the correct amount of steam required at the flare tip can be accurately controlled. Steam usage can be reduced while maintaining compliance with pollution control regulations.

## Designed for flare gas environment

The DigitalFlow GF868 flowmeter has no moving parts to clog or wear out. Its patented ultrasonic transducers are constructed of titanium or other metals that withstand the corrosive environment usually found in flare gas applications. The transducers are designed for use in hazardous locations. Wide rangeability allows measurement of flow rate from 0.1 up to 394 ft/s (0.03 to 120 m/s). In contrast to thermal flowmeters, the ultrasonic transit-time technique does not depend on the heat transfer coefficient of the flare gas and does not require regular maintenance. These and other features make the DigitalFlow GF868 unique among flare gas flowmeters.

## Self-calibration check for worry free operation

The DigitalFlow GF868 meter will perform daily health checks using our proprietary algorithm, at the predetermined flowrates and hour chosen by operators. Depending on the self-health check result, the meter will output a PASS if the meter is working correctly or a FAIL if there is any critical failure. In the case of a problem, this will allow operators to know the status of the meter ahead of time and take actions accordingly. In addition, this will give regulatory authorities and meter operators confidence that the meter is functioning reliably and accurately.

# Technical Specifications

## Electronics

<b>Flow measurement</b>	Patented Correlation Transit-Time mode
<b>Enclosures</b>	<ul style="list-style-type: none"> <li>Standard: Epoxy-coated aluminum weatherproof Type 4X/ IP66 Can be configured for Class I, Division 2, Groups ABCD, NEC &amp; CEC</li> <li>Optional: Stainless steel, weatherproof Type 4X/ IP66 Can be configured for Class I, Division 2, Groups ABCD, NEC &amp; CEC Explosion proof Class I, Division 1, Groups BCD, NEC &amp; CEC Ex d IIC T6 Gb, IECEx &amp; ATEX (II 2G)</li> </ul>
<b>Dimensions</b>	<ul style="list-style-type: none"> <li>Weight 11 lb (5 kg)</li> <li>Size (h x w x d) 14.24 in x 11.4 in x 5.12 in (362 mm x 290 mm x 130 mm)</li> </ul>
<b>Channels</b>	<ul style="list-style-type: none"> <li>Standard: One channel</li> <li>Optional: Two channels (for two pipes or two path averaging)</li> </ul>
<b>Display</b>	Two independent software-configurable 64 x 128 pixel backlit LCD graphic displays
<b>Keypad</b>	39-key tactile-feedback membrane
<b>Power supplies</b>	<ul style="list-style-type: none"> <li>Standard: 100 to 130 VAC, 50/60 Hz or 200 to 240 VAC, 50/60 Hz</li> <li>Optional: 12 to 28 VDC, ±5%</li> </ul> <p>Note: For DC-powered meters, Class 2 rated supplies must be used for the line power.</p>
<b>Power consumption</b>	20W maximum
<b>Operating temperature</b>	-4°F to 131°F (-20°C to 55°C)
<b>Storage temperature</b>	-67°F to 167°F (-55°C to 75°C)
<b>Standard inputs</b>	Two isolated 0/4 to 20 mA inputs (121 Ohm) supports 24VDC loop-powered devices. Namur NE 43 compliant For required temperature and pressure inputs
<b>Standard outputs</b>	<ul style="list-style-type: none"> <li>Six 4 to 20 mA outputs, software assignable</li> <li>Two outputs with 550 Ohms maximum load</li> <li>Four outputs with 1000 Ohm maximum load</li> </ul> <p>Namur NE43 compliant</p>

<b>Optional inputs/ outputs</b>	<p>There are four additional slots available for any combination of the following I/O boards:</p> <ul style="list-style-type: none"> <li>Analog output board with four isolated 0/4 to 20 mA outputs, 1 kOhms maximum load</li> <li>Analog input board, two types <ul style="list-style-type: none"> <li>With two isolated 4 to 20 mA inputs and 24V loop power</li> <li>With two isolated, three-wire, 100 Ohms RTD inputs; span -148°F to 662°F (-100°C to 350°C);</li> </ul> </li> <li>Totalizer/frequency output board <ul style="list-style-type: none"> <li>With four outputs per board, 10-kHz maximum.</li> <li>Software-selectable functioning in two modes</li> </ul> </li> <li>Totalizer mode: Pulse per defined unit of parameter (e.g., 1 pulse/ft<sup>3</sup> or 1 pulse/0.028 m<sup>3</sup>)</li> <li>Frequency mode: frequency proportional to rate of parameter (e.g., 10 Hz = 1 ft<sup>3</sup>/h or 0.028 m<sup>3</sup>/h)</li> <li>Alarm relay board with three hermetically sealed Form C relays; 120 VAC, 28 VDC maximum, 2A maximum; DC 56W maximum, AC 60 VA</li> </ul>
---------------------------------	--

<b>Digital interfaces</b>	<ul style="list-style-type: none"> <li>Standard: RS232</li> <li>Optional: RS485 (multiuser)</li> <li>Optional: HART®7 protocol</li> <li>Optional: Modbus® RS485 or TCP/IP</li> <li>Optional: Ethernet TCP/IP</li> <li>Optional: OPC server</li> <li>Optional: Foundation Fieldbus Namur NE107 Compliant</li> </ul>
---------------------------	--

<b>Site parameter programming</b>	Menu-driven operator interface using keypad and "soft" function keys
-----------------------------------	--

<b>Data logging</b>	Memory capacity (linear and/or circular type) to log more than 43,000 flow data points
---------------------	--

<b>Display functions</b>	<ul style="list-style-type: none"> <li>Graphic display shows flow in numerical or graphic format</li> <li>Displays logged data and diagnostics</li> </ul>
--------------------------	---

<b>European compliance</b>	<p>2014/30/EU EMC - Industrial EM Environments 2014/35/EU LVD - Equipment Class I, Pollution Degree 2, Overvoltage Category II 2014/34/EU ATEX (optional) - II 2G The GF868 is intended for inclusion in large-scale fixed installations (LSFI) and are therefore outside of the scope of Directive 2011/65/EU RoHS.</p>
----------------------------	--

## T5MAX wetted flow ultrasonic transducers

<b>Temperature range</b>	Normal Temperature (NT): -55 C to 150 C
<b>Pressure range</b>	Standard: -2 psig to 1500 psig (87.6 to 10300 kPa)
<b>Transducer Materials</b>	Standard: Titanium Hastelloy® alloys or SS316 (Monel® Consult factory)
<b>Process connections</b>	Flanged and compression fittings
<b>Hazardous Area classifications</b>	Explosive-proof Class I, Division 1, CD Optional: Group B upon request Ex d IIC T6..T3 Gb, IECEx & ATEX (II 2G) An integrated XAMP preamplifier may be installed in the certified assembly.

## T5/T17 wetted flow ultrasonic transducers

<b>Temperature ranges</b>	<ul style="list-style-type: none"> <li>Normal Temperature (NT): -55°C to 150°C</li> <li>Low Temperature (LT): -220°C to 100°C</li> <li>High Temperature (HT): -50°C to 250°C</li> <li>Extremely High Temperature (XT): -180°C to 300°C</li> </ul>
<b>Pressure range</b>	Standard: -2 psig to 1500 psig (87.6 to 10300 kPa)
<b>Transducer Materials</b>	<ul style="list-style-type: none"> <li>Standard: Titanium</li> <li>Optional: Monel® or Hastelloy® alloys or SS316</li> </ul>
<b>Process connections</b>	Flanged and compression fittings
<b>Hazardous Area classifications</b>	Explosion-proof Class I, Div. 1, CD Optional: Group B upon request II 2G Ex d IIC T6..T2 Gb, IECEx & ATEX (II 2G) An integrated XAMP preamplifier may be installed in the certified assembly.

## Insertion mechanism

### Standard and extended range

2 in (50 mm) and 3 in (76mm) flange mounted packing gland and valve.

## Preamplifier

In-line XAMP preamplifier with BNC connections; one per transducer.

<b>Gain</b>	<ul style="list-style-type: none"> <li>Standard: 20 and 40</li> <li>Optional: 2 and 10 (factory selected)</li> </ul>
<b>Preamp temperature range</b>	-40°C to +60°C (-40°F to +140°F)
<b>Location</b>	Installation of the XAMP in the transducer assembly is covered by the transducer's hazardous area certification, subject to the above temperature limits. Alternately, the XAMP may be installed separate from the transducer – remote mounted – with the following rating. Explosion-proof Class I, Division 1, CD or BCD Ex d IIC T6 Gb, IECEx & ATEX (II 2G)

## Transducer cables

- Standard: (per pair of transducers)
- One pair of coaxial cables, type RG62 A/U, preamplifier to GF868 electronics, lengths 3 m (10 ft) to 330 m (1000 ft) maximum
- Optional: flame retardant, armored cable

## Additional options

<b>PanaView™ PC-interface software</b>	The DigitalFlow GF868 communicates with a PC through a serial interface and Windows® operating systems. Features include site files, logs and other operations with a PC.
<b>Installation flowcells</b>	Transducers and flowcells for specific applications are available. Consult Panametrics for details.
<b>Flare control and optimization</b>	Consult Panametrics for details about flare control and optimization using flare. IQ as a solution for compliance to emission regulations (such as RSR MACT 63.670) and for efficient steam control to save cost.

# Flow accuracy

Transducer type	T5/T5MAX wetted transducer				T17/T5MAX 180 Degree Head (see note 1)			
Number of paths	One path		Two paths		One path		Two paths	
<b>Flow measurement range</b>								
Standard range	-328 to 328 ft/s (-100 to 100 m/s) - bidirectional							
Extended range	.1 to 394 ft/s (0.03 to 120 m/s) - non-bidirectional							
<b>Applicable pipe sizes</b>								
Diagonal 45	3 in to 14 in (50 to 350 mm) OD				14 in to 120 in (350 to 3000 mm) OD			
Bias 90	Note 2 & 3				Not Applicable			
<b>Design velocity accuracy from 1 to 394 ft/s (0.3 to 120 m/s) - refer to notes 2 and 3 below</b>								
Transducer type	T5 wetted transducer				T17/T5MAX Wetted Transducer			
Number of paths	One path		Two paths		One path		Two paths	
	1 ft/s (0.3 m/s)	>3 ft/s (1 m/s)	1 ft/s (0.3 m/s)	>3 ft/s (1 m/s)	1 ft/s (0.3 m/s)	>3 ft/s (1 m/s)	1 ft/s (0.3 m/s)	>3 ft/s (1 m/s)
Pipe Dia. < 6 in. (150mm)	±2.5%	±2.0%	±2.0%	±1.5%	NA	NA	NA	NA
Pipe Dia. ≥ 6 in. (150mm)	±2.0%	±2.0%	±1.5%	±1.5%	±2.0%	±2.0	±1.5%	±1.5%
<b>Calibrated velocity accuracy from 1 to 394 ft/s (0.3 to 120 m/s) - refer to notes 2 and 3 below</b>								
Transducer type	T5 Wetted Transducer				T17/T5MAX Wetted Transducer			
Number of paths	One path		Two paths		One path		Two paths	
	1 ft/s (0.3 m/s)	>3 ft/s (1 m/s)	1 ft/s (0.3 m/s)	>3 ft/s (1 m/s)	1 ft/s (0.3 m/s)	>3 ft/s (1 m/s)	1 ft/s (0.3 m/s)	>3 ft/s (1 m/s)
Pipe Dia. < 6 in. (150mm)	±1.5%	±1.0%	±1.0%	±0.75%	NA	NA	NA	NA
Pipe Dia. ≥ 6 in. (150mm)	±1.0%	±1.0%	±0.75%	±0.75%	±1.0%	±1.0	±0.75%	±0.75%
<b>Mass flow accuracy</b>								
2 to 120 kg	±4.0%		±3.1%		±2.7%		±2.3%	
<b>Molecular weight accuracy</b>								
2 to 120 kg/kmole	±1.8% to ±2%							
<b>Net Heating Value (NHV) accuracy - refer to note 4</b>								
Typical accuracy	2% - 5%							
<b>Flow velocity sensitivity from .1 to 1 ft/s (0.03 to .3 m/s)</b>								
Pipe Dia. = 10 in. (250mm)	±0.12 in/s(±0.004 m/s)		±0.08 in/s( ±0.003 m/s)		NA		NA	
Pipe Dia. = 14 in. (250mm)	±0.12 in/s(±0.004 m/s)		±0.08 in/s( ±0.003 m/s)		±0.08 in/s(±0.003 m/s)		±0.06 in/s( ±0.002 m/s)	
Pipe Dia. ≥ 20 in. (500mm)	±0.12 in/s(±0.004 m/s)		±0.08 in/s( ±0.003 m/s)		±0.06 in/s( ±0.002 m/s)		±0.04 in/s(±0.0015 m/s)	

## Repeatability

±0.5% at 1 to 394 ft/s (30 cm/s to 120 m/s). Consult factory for details.

## General installation straight run requirement

20D upstream and 5D downstream without CFD analysis.  
5D upstream and 2D downstream with CFD analysis. Consult factory for details.

1. T17 available in NT/HT/LT/XT; T5MAX only available in NT. T5 and T5MAX are available in both Bias 90 and 180 configuration while T17 is only available in 180 configuration.
2. Accuracy and sensitivity are dependent on pipe diameter, molecular weight and temperature. All accuracy specs assume molecular weights greater than 24 kg/kmole and temperatures less than 100 °F (38 °C)
3. All accuracy specs assume a fully developed flow profile. This typically requires 20D upstream and 5D downstream. Desired accuracy can also be achieved with shorter straight runs as little as 5D upstream and 2D downstream through correction factors from Computational Fluid Dynamics (CFD) analysis loaded to GF868 meters. Consult factory for details.
4. Assuming known N2 concentration. Consult factory for details.

Join the conversation and follow us on LinkedIn  
[linkedin.com/company/panametricscompany](https://www.linkedin.com/company/panametricscompany)

Copyright 2023 by Panametrics LLC. All rights reserved.

PANA015DS\_R20 (04/2023)



AddValue Instruments BV  
Hoovelakenseweg 185-bis  
3784 WH Terschuur (Barneveld)  
The Netherlands  
E: info@addvalueinstruments.com  
T: +31 (0)342 224015



[panametrics.com](https://www.panametrics.com)