

XMTCpro

New Generation Thermal Conductivity Binary Gas Analyzer



Panametrics' XMTCpro is a compact, and robust analyzer with SIL 2 by design for continuous measurement of gas concentrations in binary gas mixtures, including hydrogen, carbon dioxide, methane, helium, and many others.

Key Benefits

The XMTCpro is available with an integrated display and intuitive user interface. The XMTCpro also combines computer enhanced signal measurement for fastest response, real-time error detection, and MODBUS digital communication.

XMTCpro brings the user:


- · Ultra-stable thermal conductivity sensor,
- Compact design for economic sample system integration,
- Intuitive operating interface allows short learning curve, easy and flexible to use,
- Integrated high contrast, easy-to-read multiparameter display,
- MODBUS digital communication provides measurement and configuration data,
- · High level of reliability with SIL 2 by design.

Minimal calibration and service

The XMTCpro is the most stable thermal conductivity analyzer on the market today. The rugged XMTCpro measuring cell resists contamination and remains insensitive to flow variations.

Since the design uses no moving parts, the transmitter can easily withstand the shock, vibration and harsh environments found in many industrial applications.

If the transmitter requires maintenance, its modular construction permits fast and easy servicing. Users can field-calibrate it quickly and replace the plugin measuring cell with a pre-calibrated spare in minutes.



Relative thermal conductivities of some common gases at 100°C (212°F). The XMTCpro uses the difference in thermal conductivity of the sample gas compared to the background gas to determine its concentration.

Sample system

Sample systems deliver a clean, representative sample to the XMTCpro at optimal temperatures, pressures and flow rates.



Panametrics offers sample systems for a wide variety of applications. For assistance in designing your own sample system, please consult our application engineering team.

Applications

The stable and accurate thermal conductivity sensor, certified globally for use in hazardous area environments, make the XMTCpro the tool of choice for use in:

Hydrogen Economy

 ${\rm H_2}$ in various applications along the hydrogen value chain

Metals industry

H₂ in N₂ atmosphere in metal heat-treating furnaces

Electric power industry

H₂ in cooling systems for generators

Petroleum industry

H₂ in hydrocarbon streams

Chemical industry

- H₂ in NH₃ and in CH₃OH synthesis gas
- H₂ in chlorine plants

Methane industry

CO₂ in CH₄

Landfill/biogas industry

- CO, in biogas
- CH₄ in biogas

Gas production industry

Purity monitoring of Ar, H₂, N, and He

Food Industry

CO, in fermentation process

Performance

Accuracy: ±2% of span*
Linearity: ±1% of span

Repeatability: ±0.5% of span

Zero Stability: ±0.5% of span per week (±1% for 0-1% range)

Span Stability: ±0.5% of span per week

Response Time: 20 seconds for 90% step change

(±1% for 0-1% range)

Measurement Ranges

- 0% to 1%
- 0% to 2%
- 0% to 5%
- 0% to 10%
- 0% to 25%
- 0% to 50%
- 0% to 100%
- 50% to 100%
- 80% to 100%
- 90% to 100%
- 95% to 100%
- 98% to 100%

Measurement Gases (Typical)

- H₂ in N₂, air, O₂ or CO₂
- He in N₂ or air
- CO_2 in \tilde{N}_2 or air
- SO₂ in air
- Ar in N₂ or air
- H₂/CO₂/air for hydrogen-cooled generators

Required Sample Flow Rate

50 to 2,000 cc/min (0.1 to 4.0 SCFH); 250 cc/min (0.5 SCFH) nominal

Functional

Functional Safety

IEC61508 SIL 2 (optional)

Analog Output

Two 4 to 20 mA isolated, 550 Ω maximum load, field-programmable

Digital Output

Modbus RS232/RS485

Powe

24 VDC ±4 VDC, 1.2 A maximum

Temperature

- -20°C to +50°C (-4°F to +122°F), Standard operating temperature
- -5°C to +65°C (+23°F to +149°F), High operating temperature
- -20°C to +65°C (-4°F to +149°F), Storage temperature

Physical

Sensor wetted materials

- Standard: 316 stainless steel, glass and Viton® O-rings
- Optional: Hastelloy C276 and Chemraz® O-rings

Dimensions

- Wp. (H x D x W): 228 x 178 x 142mm (9 x 7 x 6in)
- Ex-proof (H x D x W): 252 x 178 x 142mm (10 x 7 x 6in)

Weight

- Aluminum version: 4.5kg / 9.9 lb
- Stainless Steel version: 11.0 kg / 24.2 lb

Connections

- 3/4 in NPT (electrical)
- 1/4 in NPTF (sample gas inlet/outlet)

Environmental

IP66, Type 4X

IECEx compliance

Ex db IIC T6 Gb,
 Ex tb IIIC T78°C Db,
 -20°C < Tamb < +65°C

European Union compliance

- EMC Directive 2014/30/EU
- ATEX 2014/34/EU: II 2 GD Ex db IIC T6 Gb, Ex tb IIIC T78°C Db, -20°C < Tamb < +65°C

NEC/CEC


- CI I, II, III Div 1. Groups ABCDEFG, T6
- Cl I, Zn 1 AEx/Ex db IIC T6 Gb
- CI II, Zn 21 AEx/Ex tb IIIC T78°C Db
- Cl I, II, III Div 2, Groups ABCDEFG, T6/T5**
- -20°C < Tamb < +65°C

^{*} Accuracy may vary and depends on the gases and concentration ranges measured.

^{**} T5 applies for higher max ambient temperatures (from +55°C to +65°C) for Division 2 (US/Canada).


Aluminum Version



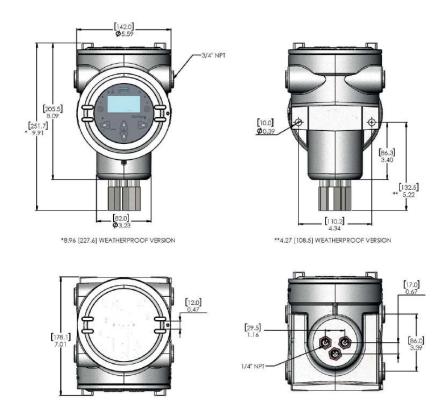


Stainless Steel Version



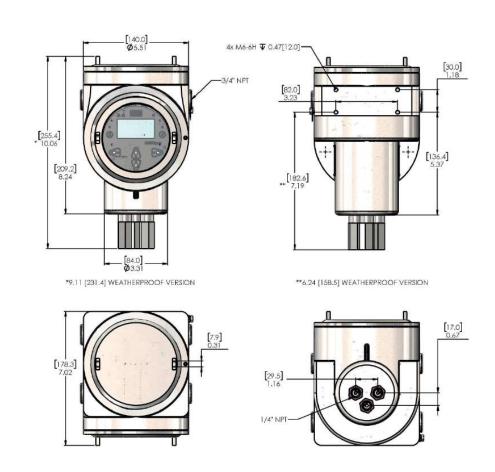

Order and calibration information

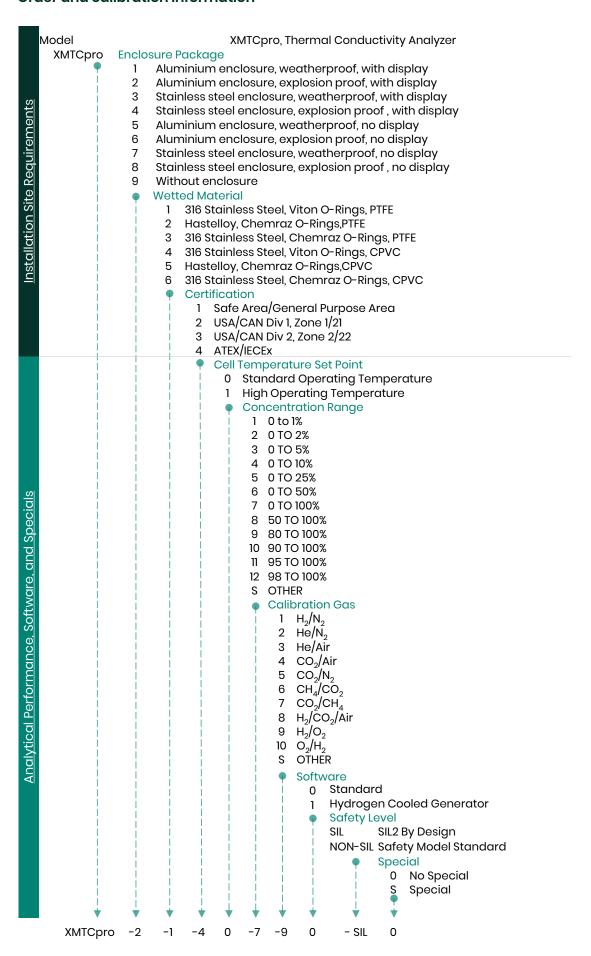

Panametrics, a Baker Hughes business, provides solutions in the toughest applications and environments for moisture, oxygen, liquid and gas flow measurement.

Experts in flare management, Panametrics technology also reduces flare emissions and optimizes performance.

With a reach that extends across the globe, Panametrics' critical measurement solutions and flare emissions management are enabling customers to drive efficiency and achieve carbon reduction targets across critical industries including: Oil & Gas; Energy; Healthcare; Water and Wastewater; Chemical Processing; Food & Beverage and many others.

Join the conversation and follow us on LinkedIn linkedin.com/company/panametricscompany

